









# GKS 235 Professional



## **BOSCH**

### **English**



The power tool with the article number 3 601 E7A 0B. that you have acquired is equivalent to the power tool with the article number  $3\,601\,\text{E7A}\,0..$  , with exception of the switching on and off.

Please refer to the enclosed operating instructions.

### **Starting Operation**

#### **Switching On and Off**

To **start** the power tool, **first** push the lock-off button for the On/Off switch 2 and **then** press the On/Off switch **5** and keep it pressed.

To switch off the power tool, **release** the On/Off switch **5**.

**Note:** For safety reasons, the On/Off switch **5** cannot be locked on but must remain pressed during operation.

Note: After the On/Off switch 5 has been released, the saw blade continues running for few seconds until it stops completely.

Subject to change without notice.

주의: 전원 스위치 5을 놓아도 톱날이 완전히 정지할 때 까지 몇 초간 잔여 회전합니다.

위 사항은 사전 예고 없이 변경될 수도 있습니다.



하국어

구매하신 제품 번호 3601E7A0B.의 전동 공구는 전원 스위치 작동을 제외하고는 제 품 번호 3601E7A0..의 전동공구와 일치합 니다.첨부되어 있는 사용 설명서를 참조

하십시오.

#### 기계 시동

### 전원 스위치 작동

전동공구를 **작동하려면우선** 시동 안전 잠금장치 2를 켜 고 그리고 나서 전원 스위치 5을 누르거나 누른 상태를 유지하십시오.

전동공구의 **스위치를 끄려면** 전원 스위치 **5**을 놓으면 됩 니다.

주의: 작업 안전을 위해 전원 스위치 5을 고정할 수 없 으므로, 작동 중에 이를 계속 누른 채 유지해야 합니다. **Robert Bosch Power Tools GmbH** 

70538 Stuttgart **GERMANY** 

www.bosch-pt.com

1 609 92A 3G5 (2008.06) 0 /1





Bosch Power Tools

1 609 92A 3G5 | (5.9.16)













